


HINGE OFFSET: HOW TO MEASURE

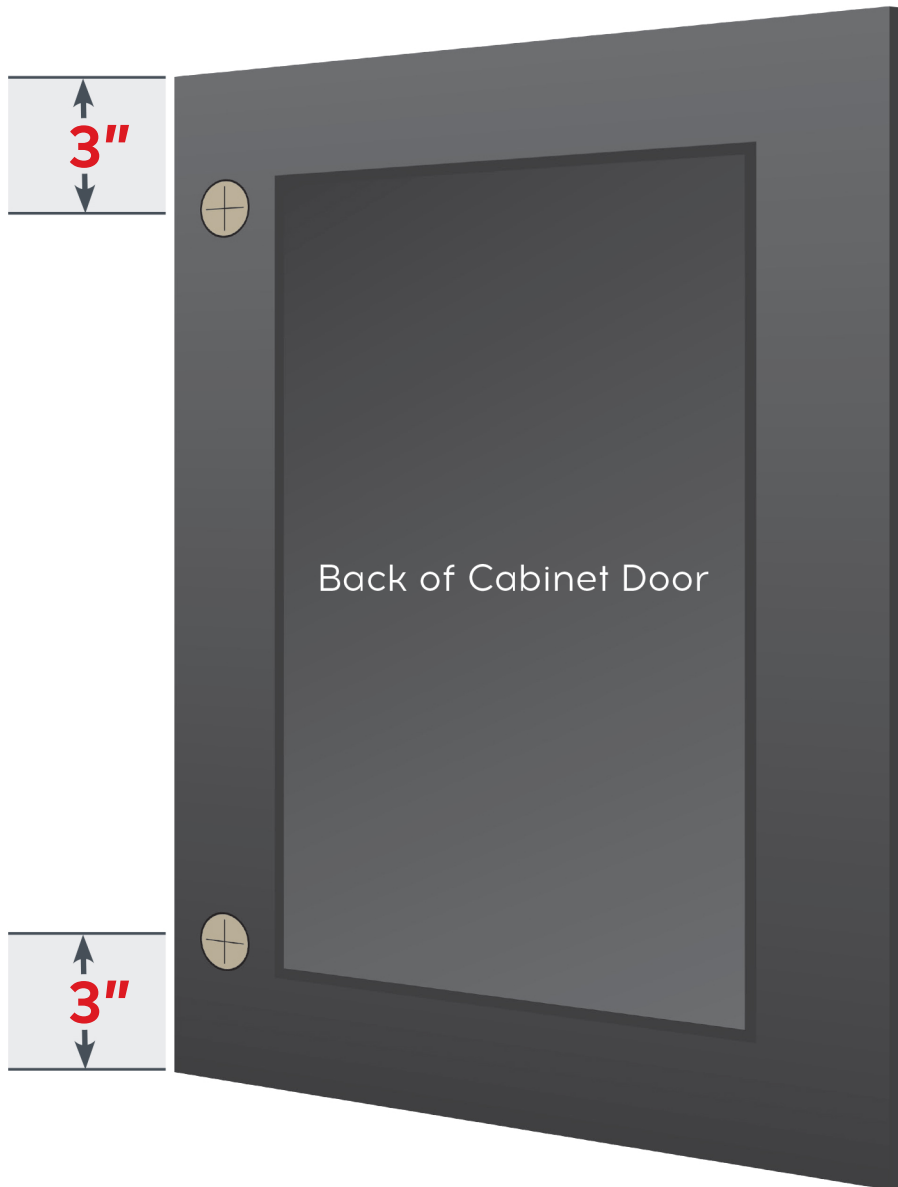

Measure the distance from the bottom & top of the cabinet to the MIDDLE of the bore hole.
Standard is 3" offset.



866.715.EDGE • sales@edgeindsupply.com • edgeindsupply.com