


Paint Ready Best Practices



Paint Ready
Shaker Classic

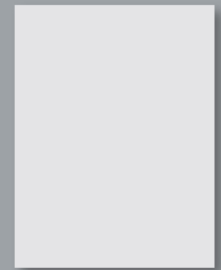

Paint Ready
Slab

Paint ready doors are primed for paint and come in shaker and slab styles. The best practices below can lead to a long-lasting finish in any color you choose.

- 1 Don't sand the surface of the doors. Doors are pre-primed and ready to accept paint.
- 2 Before painting make sure to clean surface with a light cleaning solution (warm soapy water, 409, etc.) and dry thoroughly.
- 3 Putty can be applied to cover small imperfections or joinery. Make sure to wipe off excess and don't sand.
- 4 All types of paint can be used with a brush, roller or sprayer.
- 5 Refer to paint manufacturer's product data sheet for best paint application.
- 6 Coverage can be completed in one step, but multiple layers can be applied if desired.

